



chariton VALLEY

phone ♦ internet ♦ cable tv ♦ wireless

ADB Remote Control

STB

Send commands to the set top box

TV

Send commands to the TV

AV

Choose between your TV's different connections

Mute

Toggles audio on/off

Vol +/-

Adjust the volume; in Guide jumps listings 12 hours ahead/back

Closed Caption

Toggles closed captions on or off

Menu

Display the Menu Bar

Direction Buttons

Move the highlight in system screens

OK

Enter a choice you have made

Back

Tune to the previous channel

Function Buttons

Reserved

DVD

Send commands to the DVD player

Power

Turn a selected device on or off

Shift

Used to program your remote control

Number Pad

Enter a channel number or PIN

Keyboard

Displays an on-screen keyboard

Prog +/-

Change the channel; in Guide jumps listing one screen ahead/back

Action

Displays Guide

Info

Display the Info Bar

Exit

Close any screen and return to TV

Playback Controls

Control playback of Video On Demand and DVR-recorded programs.



Remote Control Programming Instructions

Setting up the ADB Remote Control

Search Method

The Search Method allows you to scan through all the codes contained in the memory of the ADB Remote Control.

1. Switch your television on (not in standby mode).
2. Press the **TV** key on the ADB Remote Control.
3. Press and hold down **SHIFT** key until the red light blinks twice (the red light will blink once then twice).
4. Press **9 9 1**. The red light will blink twice.
5. Next, press a function.
6. Aim the ADB Remote Control at your Television. Now press **PG+ (channel up key)** over and over, in order to scan through the codes available in the memory. You may have to press this key many times (up to 150 times) so please be patient.
 - If you skip past a code, you can go to the previous code(s) by pressing the **PG- key (channel down key)**. Remember to keep pointing the ADB Remote Control at your Television while pressing this key.
7. As soon as you have found an appropriate code, press **SHIFT** key to store the code.
 - You can sample all functions (0, 1, 2, 3, Power, Volume Up, Play Stop and Mute), the last function that was sampled before PG up/PG down will be the designated function to send for each PROG up/PROG down key press. If no key is pressed before PG up/PG down then the default function will be power.
 - In each code you can test the following functions: 0, 1, 2, 3, Power, Volume Up, Play Stop and Mute. After sampling these functions you can continue the search with the previous (PROG down) or next (PROG up) code which will send the function that was originally pressed after 991.
 - Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
 - If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
 - To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.

If after completing the Search Method and your device is still not working with the ADB Remote, please refer to www.cvalley.net to find the full users guide.

This guide will include all manufacturer setup codes.